

Skift af varmelegeme

Replacement of the heat element




Start med at løsne den metriske forskruning.

Start by loosening the metric screw.



Vend heateren på hovedet og ret metaltrådende ud. Du kan nu fjerne ståltrådsnettet.

Turn the heater upside down and straighten out the metal wires. You can now remove the wire mesh.

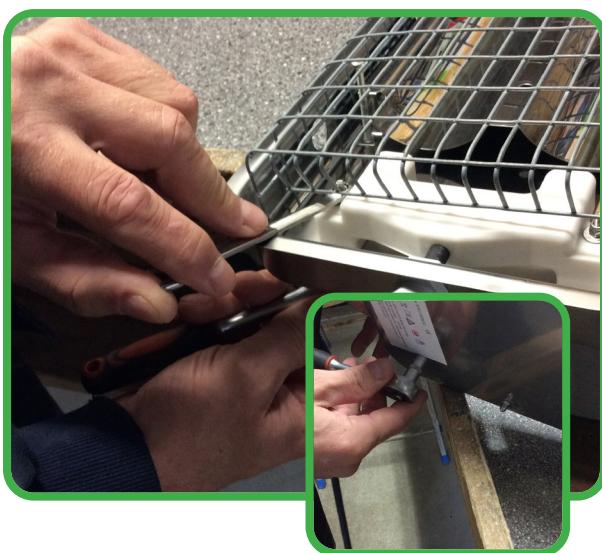

Løsen de 2 møtrikker i den ene ende, hvor støbningen er fastgjort til metaldelen.

Loosen the 2 nuts from the bolts in the end where the plastic casting is connected to the metal.



Ledning og varmelegme kan nu fernes og udskiftes med en ny.

It's now possible to remove the cord and the heater, and replace it with a new elment.

Sæt det nye varmelegme i ved først at trække ledningen igennem hullet ved den metriske forskruning, indsæt skruer, spændeskiver og møtrikker, stram møtrikkerne med en 7 mm nøgle.

The new heat element is inserted, by pulling the cord through the hole in the metric screw, then insert bolts, washers and nuts, tighten the nuts with a 7 mm wrench.



Stram nu den metriske forskruning.

Now tighten the metric screw.

Forkert position.

Wrong position.



Ret varme legemet med hånden, så der er luft imellem legemet og parabolen.

Align the heating element with your hand, so there is air between the heater and the dish / reflector.

